





1 CHANNELS

PARENTS: 0.5

NAVIGATION MODE

General Description

THE CURRENT CHANNEL LIST IS DISPLAYED WITH FOCUS ON THE CURRENTLY TUNED CHANNEL. THE FOCUS IS ALWAYS IN THE 5TH ROW OF THE LIST (THE LIST HAS 9 ROWS).

LIST HEADER WITH TEXT: «NUMBER OF ALL CHANNELS». THE HIGHLIGHT IS INITIALLY ON THE FOCUS. SCROLLING UP AND DOWN (WITH THE CURSOR UP/ DOWN BUTTONS) MOVES THE HIGHLIGHT.

IF THE USER SCROLLS UP UNTIL THE FIRST CHANNEL OF THE LIST REACHED AND CONTINUES SCROLLING UP, THE HIGHLIGHT WILL JUMP TO THE LAST CHANNEL (AND VICE VERSA).

IF THE USER MOVES THROUGH THE LIST WITH PG UP/DOWN, THE LIST WILL STOP SCROLLING WHEN THE BEGINNING OR THE END IS REACHED.

THE ALL CHANNELS LIST IS SORTED ALPHABETICALLY BY DEFAULT. AFTER TUNING, MENU DISAPPEARS.

Television	Action	Description
POWER	SLEEP	
MUTE	VOL ON/OFF	
VOLUME +/-	SET VOL	
0-9	TUNES (0,3)	SELECTED CHANNEL (INPUT)
LAST	TUNES (0,3)	LAST WATCHED CHANNEL

Navigation	Action	Description
CURSOR LEFT	0,5	BACK TO PARENT
CURSOR RIGHT		
CURSOR UP	PREV	HIGHLIGHTS PREVIOUS CHANNEL
CURSOR DOWN	NEXT	HIGHLIGHTS NEXT CHANNEL
MENU	0,3	BACK TO TV
OK	TUNES/0,3	TUNES IN THE BACKGROUND/IF PRESSED AGAIN

Action	Label	Action	Description
REWIND	PAGE UP	PAGE UP	SCROLLS UP 10 LIST ITEMS
STOP	RESORT LIST	1,0,1	RESORT LIST SCREEN
PLAY	CHANGE LIST	1,1	JUMPS TO THE LIST OF LISTS
FORWARD	PAGE DOWN	PAGE DOWN	SCROLLS DOWN 10 LIST ITEMS
INFO			

Shortcuts	Action	Description
REC	4,3	RECORDING
NHP		
TXT		
CH	0,3	TV MODE
EPG	2	PROGRAM GUIDE
ARCH	3	ARCHIVE
PUR	4	PUR
LNG	0,3,4	PROGRAM LANGUAGE
LIST	1,1	CHANNEL LIST SELECTION



1.1 CHOOSE CHANNEL LIST

PARENTS: 1, 2, 4.1, REMOTE LANG SETTINGS MODE

General Description

OVERLAY OF THE LIST OF CHANNEL LISTS.

HEADER: «CHOOSE LIST»

- «PERSONAL\_LIST 1»
- ...
- ALL CHANNELS

UP TO 9 PERSONAL LISTS

NO TIMEOUT

AFTER A SELECTION HAS BEEN MADE OVERLAY DISAPPEARS AND USER JUMPS BACK TO PARENT.

IF SELECTED LIST IS LOCKED, THEN IT FIRST LEADS TO PIN DIALOG AND IF CORRECT SETS THE PERSONAL LIST. IF NOT, BACK TO PARENT (HERE)

THE PREVIOUSLY TUNED CHANNEL STAYS TUNES UNTIL NEXT CHANNEL SELECTION EVEN IT IS NOT ON THE NEW CHANNEL LIST ANYMORE.

Television	Action	Description
POWER	SLEEP	
MUTE	VOL ON/OFF	
VOLUME +/-	SET VOL	
0-9		
LAST		

Navigation	Action	Description
CURSOR LEFT		
CURSOR RIGHT		
CURSOR UP	PREV	HIGHLIGHTS PREVIOUS ITEM
CURSOR DOWN	NEXT	HIGHLIGHTS NEXT ITEM
MENU		
OK	SELECTS	SELECTS CHANNEL LIST, BACK TO PARENT

Action	Label	Action	Description
REWIND			
STOP			
PLAY	CANCEL	PARENT	
FORWARD			
INFO			

Shortcuts	Action	Description
REC		
NHP		
TXT		
CH		
EPG		
ARCH		
PUR		
LNG		
LIST	PARENT	BACK TO PARENT

